

3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

Product Manual **Professional Material Mixers**



BNR6402K



3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

PRODUCT DESCRIPTION

From low-viscosity paints to high-viscosity mortars these electric mixers will get your job done quicker, safer and easier than a conventional ½" drill motor. The ergonomically designed handles and the variable 2-speed motor with softstart make the job quicker, safer and easier. The heavy-duty gearbox and high-torque motor will outlast a standard ½" drill motor by 3-4 times.

The machines have been designed to mix liquid and powder building materials such as paint, mortar, adhesive, plaster, epoxy and similar substances.

The relevant mixing action depends on the consistency of the materials and the quantity that has to be mixed. This must be set up for the appropriate mixing paddles.

BNR6208B maximum mixing capacity is 3 bags (25 gallons) or 120 lbs of liquid material.

You must abide by certain safety precautions when using the equipment, in order to prevent injuries and damages from occurring. Therefore you must always read through this operating manual carefully.

PLEASE NOTE - This manual must be kept in a safe place so that the information that it contains is always available. This operating manual must accompany the equipment if it is transferred to someone else.

We do not accept any liability for accidents or damage arising from ignoring this manual and the safety instructions.

SAFETY INSTRUCTIONS

Read through these operating instructions carefully before using these tools. Become familiar with the functions and method of operation. To ensure proper operation, always maintain the tools according to the instructions. The operating instructions and associated documents should always be kept close to the appliance.

When using power tools, you must observe the following basic safety precautions in order to ensure protection from electric shocks, injury and fire. Read and follow all the instructions before using these power tools. Follow the notes on safety.

Always check ito see if voltage corresponds with the manufacturer's requirements

Our mixers are double-insulated in accordance with EN60745; therefore, an ground wire is not required.

USE CORRECT SUPPLY VOLTAGE

The power supply voltage must match the information quoted on the tools identification plate.

USE PROPER EXTENSION CORD: Only use an approved extension cable that is suitable..for the machine's power.

SWITCH OFF THE MACHINE IMMEDIATELY IN CASE OF:

- 1. Malfunction in the plug or power cable.
- 2. Broken switch.
- 3. Smoke or smell of scorched insulation.

GENERAL SAFETY RULES

WARNING! Read all safety warnings and all Instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your electric power tool or battery-operated (cordless) power tool.

WORK AREA SAFETY

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.



3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

SPECIFICATIONS

TECHNICAL DATA	BNR6169	BNR6400	BNR6402K
Power	1050W/9 apms 1.4Hp	1800W / 15 Amps	1800W / 11.7 amps / 1.9 Hp
Voltage	120V / 60 Hz	120V / 60 Hz	120V / 60 Hz
Number of Gears	1	2	2
No-Load-Speed	1-600 rpm	150 - 300 rpm	18-460 / 300-700 rpm
Protection/ Class of Protection	Double Insulated Class II		
Certification	ETL / GS / CE	ETL / GS / CE	GS / CE
Thread for Fixing the Paddle	M14 & 1/2" Chuck	M14 & 1/2" Drill Chuck	1/2" Hex Quick Change Chuck
Mixing Paddle (CD max.)	4-3/4" (120mm)	6-1/2" (160mm)	4-3/4" (120mm)

ELECTRIC SAFETY

- Power tool plugs must match the outlet: Never modify the plug in any way. Do not use any adapter plugs for grounded power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.
- Do not expose power tools to rain or wet conditions.
 Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

PERSONAL SAFETY

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not, use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat. and/or hearing protection used for appropriate conditions will reduce personal injuries.
- Prevent unintentional starting. Make sure the switch is in the off-position before connecting to power source.

- Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents
- Remove any adjusting key or wrench before starting the power tool. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery.
 Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

POWER TOOL USE AND CARE

- Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not tum
 it on and off properly. Any power tool that cannot be
 controlled with the switch is dangerous and must be
 repaired.
- Disconnect the plug from the power source and/or the battery pack before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.



3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Use the power tool, accessories and tool bits in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

SERVICE

Have your power tool serviced by a qualified repair person using only Identical replacement parts. This will ensure that the safety of the power tool is maintained.

PRECAUTION ON USING MIXERS

Attention! - You must abide by the following basic safety measures to prevent electrical shocks, injuries and the danger of fire when using electric tools. Read and abide by these instructions before you start to use any tools.


These Instructions must be kept in a safe place.

- The equipment must never be used in areas where an explosive atmosphere exists.
- Never mix in solvents or substances containing solvent that have flash points below 21°C.
- Do not let the electrical cord touch any parts of your body.
- Only use the extension cord approved for use in the working area.
- The unit must only be started and stopped when it is inside a mixing vessel. Ensure that the mixing vessel is placed on a solid, secure base.
- Never reach into the mixing vessel with your hands or any other object during the mixing process.
- We recommend that you always wear industrial safety gloves and safety goggles when working with the mixer.
- Wearing close-fitting clothes is mandatory.
- Always allow for twisting due to torque
- Always wear a dust mask

Before Initial Operation

Check to see that the rated voltage on the tool nameplate corresponds to the tool requirement. Before using the tool, read the instruction book carefully.


Mixer Assembly (Fig. 2):

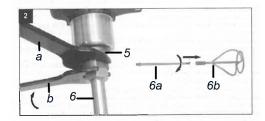

First screw mixer shaft (6a) together with mixer paddle (6b). Screw the mixer (6) into the mixer (5). Use the two wrenches to tighten. Use one of the wrenches (a) to hold the mixer (5) in place and then use the second wrench (b) to tighten up the mixer (6). Proceed in the reverse sequence to undo the paddle from the mixer.

STARTING THE MIXER

Ensure that the data listed on the nameplate matches the voltage before connecting the unit up to power.

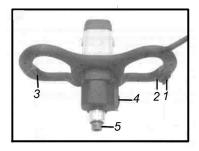

On / Off switch

- Switching on: Press the switch (1)
- Continuous running: Press the locking knob on the switch (1) (2) to lock it in place.
- Switching off: Press the switch (1) briefly
- Speed control: Use the speed control (3) to select the speed.
- Switching between 1st 2nd gear (4)



3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

The switch position enables you to work at high or low speeds. The gear switch position should only be changed when the unit is stopped in order to prevent the gearing from being damaged.

1st gear - Upper position 2nd gear- Lower position

CARE AND MAINTENANCE

- Remove the plug from the socket before making any adjustment, servicing or maintenance.
- Your power tool requires no additional lubrication or maintenance. Always store your power tool in a dryplace.
- If the electric cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid a hazard.

CLEANING

- Keep the safety devices, ventilation slots and motor housing as free of dirt and dust as possible.
- Clean the unit by rubbing it with a clean cloth or blow it clean using low-pressure compressed air.
- We recommend that you always clean the unit immediately after using it.
- Clean the unit regularly by rubbing it with a damp cloth and a little soft soap. Do not use cleaners or solvents

 these will attack the plastic parts in the unit. You must also ensure that water does not get inside of the unit.

CARBON BRUSHES

If excessive sparking occurs you must have the carbon brushes checked by a qualified electrician.

Attention! Changing the brushes should be done by a qualified electrician.

MAINTENANCE

There are no parts fitted inside the unit that require maintenance.

CORRECTIVE ACTION IN CASE OF FAILURE The operating switch is switched on, but the motor is not working.

- Wires in the electric plug or in the socket are loose.
 Have socket and plug checked or repaired or replaced.
- The switch is faulty. Have the switch replaced.

The operating switch is switched on, but unusual noises can be heard, the motor is not working or only very slowly.

- Switch contact has failed. Have the switch replaced.
- Component jammed. Have the electric tool checked or repaired.
- Too much thrust, as a result the motor is dragging. Use less thrust during the task.
- · Gear switch not completely engaged

Motor gets hot.

- Foreign substances have got inside the motor. Have the foreign substances removed.
- Lack of or contaminated lubrication grease. Have lubricating grease applied or replaced.
- Pressure too high. Use less thrust during the task

Frequent or strong sparks on the commutator.

- Short circuit on the armature. Have the armature replaced.
- Carbon brushes worn out or jammed. Have the carbon brushes checked.
- Rough running of the commutator. Have the surface of the commutator cleaned or ground.

For your own safety, never remove parts or accessories of the electric tool during operation, In case of fault or damage have the electric tool repaired only by a qualified workshop or by the manufacturer.






3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

BNR6169 Material Mixer


PARTS LIST (BNR6169)		
Part	DESCRIPTION	
BNR6169-01	Output shaft	
BNR6169-02	Semi-circular key 3×3.7×10	
BNR6169-03	Screw ST 4.8×48	
BNR6169-04	Gear housing	
BNR6169-05	Bearing 6002	
BNR6169-06	Collar 32	
BNR6169-07	Collar 15	
BNR6169-08	Gear for output shaft	
BNR6169-09	Bearing hk1010	
BNR6169-10	Handle	
BNR6169-11	O Ring	
BNR6169-12	Bearing 6000	
BNR6169-13	Fan guide	
BNR6169-14	Rotor	
BNR6169-15B	Inslation ring	
BNR6169-16	Bearing 608	
BNR6169-17	Rubber cover 608	
BNR6169-18	Stator	
BNR6169-19	Motor housing	
BNR6169-20	Screw M8	
BNR6169-21	Back cover for motor housing	
BNR6169-22	Back handle knob	
BNR6169-23	Back handle	
BNR6169-24	Screw st 3.8×14	
BNR6169-25	Handle nut	
BNR6169-26	Cable holder	
BNR6169-27	Switch	
BNR6169-28	Capacitor	
BNR6169-29	Connector	
BNR6169-30	Cable	
BNR6169-31	Cable sleeve	
BNR6169-32	Handle cover	
BNR6169-33	Brush holder sets	
BNR6169-34	Carbon brush	
BNR6169-35	Middle cover	
BNR6169-36	Bearing hk0810	

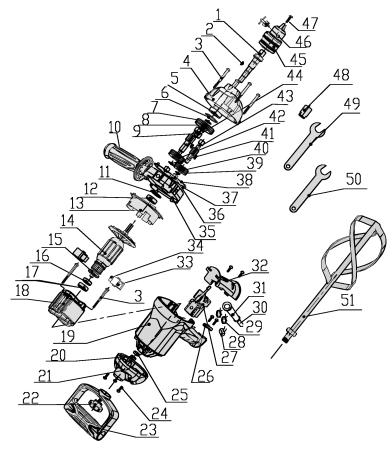

BNR6169-37	Pin 4×6
BNR6169-38	Sealed washer
BNR6169-39	Collar 10
BNR6169-40	Big gear for main driving shaft
BNR6169-41	Collar 12
BNR6169-42	Big gear for sud- driving shaft
BNR6169-43	Main driving shaft
BNR6169-44	Sub-driving shaft
BNR6169-15	Drill chuck
	Chuck key
BNR6169-47	Chuck screw
BNR6169-48	Connection adapter
BNR6169-49	Wrench 17#
BNR6169-50	Wrench 19#
BNR003-120-51	Mixing paddle



3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

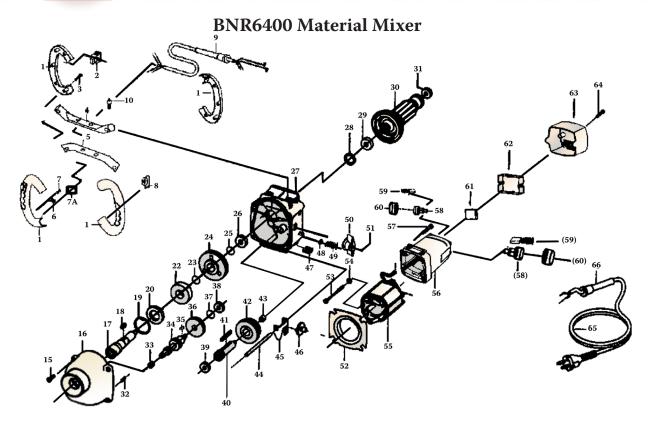

Part No.	Description
BNR6400-01	Handle set
BNR6400-02	Switch
BNR6400-03	Screw ST4X20
BNR6400-04	Tube
BNR6400-05	Tube
BNR6400-06	Clamp
BNR6400-07	Screw ST3.SX16
BNR6400-07A	Connection Cover
BNR6400-08	Speed controller
BNR6400-09	Wire Harness
BNR6400-10	Screw M8X12
BNR6400-15	Screw MSX20
BNR6400-16	Bottom gear cover
BNR6400-17	Spindle
BNR6400-18	Hemicycle key 4XSX12
BNR6400-19	Safety ring
BNR6400-20	Dust cover
BNR6400-22	Bearing 6204DDU
BNR6400-23	Safety ring
BNR6400-24	Spindle gear


BNR6400-25	Safety ring
BNR6400-26	Bearing 6000ZZ
BNR6400-27	Gear case
BNR6400-28	Sealring
BNR6400-29	Bearing 6001ZZ
BNR6400-30	Armature Assembly
BNR6400-31	Bearing 608ZZ
BNR6400-32	Pin
BNR6400-33	Needle bearing HK0810
BNR6400-34	Countershaft
BNR6400-35	Hemicycle key 2.5x3.7xl0
BNR6400-36	Motor gear
BNR6400-37	Flat washer
BNR6400-38	Bearing 698ZZ
BNR6400-39	Bearing 608ZZ
BNR6400-40	Pinion
BNR6400-41	Parallel key
BNR6400-42	Spindle double gear
BNR6400-43	Needle bearing HK0810
BNR6400-44	Pivot
BNR6400-45	Glide

BNR6400-46	Pivot
BNR6400-47	NutM8
BNR6400-48	Bail <l>4</l>
BNR6400-49	Spring
BNR6400-50	Lever
BNR6400-51	Screw ST3X16
BNR6400-52	Airguide shim
BNR6400-53	Screw STSX6S
BNR6400-54	Spring washer
BNR6400-55	Stator
BNR6400-56	Motor housing
BNR6400-57	ScrewMSX25
BNR6400-58	Brush holder
BNR6400-59	Carbon brush
BNR6400-60	Brush cap
BNR6400-61	Controller
BNR6400-62	Protective cover
BNR6400-63	Top Cover
BNR6400-64	Screw ST 3.5x16
BNR6400-65	Cord
BNR6400-66	Sleeve



3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

BNR6402K Material Mixer

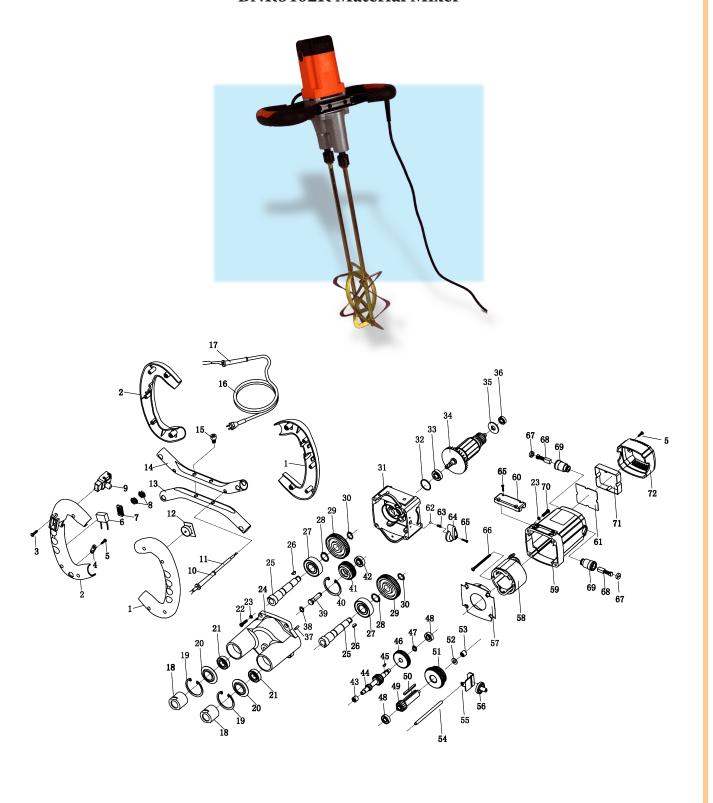



3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

BNR6402K Material Mixer

NO.	ITEM NO.	QTY.	DESCRIPTION
1	BNR6402K-01	1	Right Handle
2	BNR6402K-02	1	Left Handle
3	BNR6402K-03	10	Screw ST 3.9X1.9X20
4	BNR6402K-04	3	Electrical Power Clamp
5	BNR6402K-05	8	Screw ST3.5X1.1X16 Point
6	BNR6402K-06	1	Capacitor 0.33pF 250V~ K X2
7	BNR6402K-07	1	Inductance 28.8 X 13.2 X 4
8	BNR6402K-08	2	Round inductance Ø14.2 X Ø7.3
9	BNR6402K-09	1	Power Switch
10	BNR6402K-10	2	Electrical Sleeve (MG)
11	BNR6402K-11	2	Electrical Two Wire Cable
12	BNR6402K-12	1	Speed Controller
13	BNR6402K-13	1	Steel Pipe (no hole)
14	BNR6402K-14	1	Steel pipe (with a hole)
15	BNR6402K-15	4	Socket Screw M8X12
16	BNR6402K-16	1	Electrical Power Cord
17	BNR6402K-17	1	Electrical Cord Sleeve (Big)
18	BNR6402K-18	1	Mixing Paddle Threaded Connector
19	BNR6402K-19	2	Retaining Ring Ø40
20	BNR6402K-20	2	Dust cover
21	BNR6402K-21	2	Bearing 6203 Z
22	BNR6402K-22	4	Machina Screw M5X20
23	BNR6402K-23	8	Split Lock Washer for M5
24	BNR6402K-24	1	Bearing Housing
25	BNR6402K-25	2	Spindle
26	BNR6402K-26	2	Hemicycle key 3X3X10
27	BNR6402K-27	2	Bearing 6002 Z
28	BNR6402K-28	2	Retaining Ring Ø17
29	BNR6402K-29	2	Spindle gear
30	BNR6402K-30	2	Retaining Ring Ø12
31	BNR6402K-31	1	Gear Box Housing
32	BNR6402K-32	1	O-Ring Ø28*1.9
33	BNR6402K-33	1	Bearing 6001 2RS
34	BNR6402K-34	1	Rotor Subassembly
35	BNR6402K-35	1	M Insulation Gasket

NO.	ITEM NO.	QTY.	DESCRIPTION
-			
36	BNR6402K-36	1	Bearing 608 ZZ
-	BNR6402K-37	2	Pin 4*14
-	BNR6402K-38	1	Retaining Ring Ø9
-	BNR6402K-39	1	Reverse shaft
40	BNR6402K-40	1	Retaining Ring Ø26
41	BNR6402K-41	1	Reverse Sliding Gear
42	BNR6402K-42	1	Bearing 6000 ZZ
43	BNR6402K-43	1	Needle Bearing HK0810
44	BNR6402K-44	1	Second Active Gear Shaft
45	BNR6402K-45	1	Hemicycle Key 2.5X3.7X10
46	BNR6402K-46	1	Motor Gear
47	BNR6402K-47	1	Retaining Ring Ø10
48	BNR6402K-48	2	Bearing 698 ZZ
49	BNR6402K-49	1	Third Active Gear Shaft
50	BNR6402K-50	1	Parallel Key 4X4X45
51	BNR6402K-51	1	Spindle Double Gear
52	BNR6402K-52	1	Flat Washer Ø16xØ8x0.8
53	BNR6402K-53	1	Needle Bearing HK0808
54	BNR6402K-54	1	Pivot Ø6*89
55	BNR6402K-55	1	Glide
56	BNR6402K-56	1	Pivot
57	BNR6402K-57	1	Airguide Shim
58	BNR6402K-58	1	Stator Coil (including the brush ring)
59	BNR6402K-59	1	Chassis
60	BNR6402K-60	1	Clamp
61	BNR6402K-61	1	Constant Power Board
62	BNR6402K-62	1	Ball Ø4
63	BNR6402K-63	1	Spring Ø0.5*Ø3.9*L12
64	BNR6402K-64	1	Lever
65	BNR6402K-65	5	Screw ST 3X16
66	BNR6402K-66	2	Screw ST 5X65
67	BNR6402K-67	2	Brush cap
68	BNR6402K-68	2	Carbon brush 6.5*15*18
69	BNR6402K-69	2	Brush holder
70	BNR6402K-70	4	Screw M5X25
71	BNR6402K-71	1	Circuit board seats
'-			l .



3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

Paddles for the BN Power Mixers















BNRA0315	1/2" Drill Chuck
BNR001 - Specify Diameter	120 mm (4.75") or 140 mm (5.50") • Overall length: 60 cm (24") • Designed for plasters, adhesive mortars, mortars, tile adhesives and fillers, best for sticky and viscous materials. • Material Flow: Bottom to Top • Connection: M14 x 2 male threads
BNR002-57	Diameter: 57 mm (2.25") • Overall length: 13.5" • Designed for paints, lacquers, thin coatings, and ready-mix plaster. Use on BN6169 or drill. • Material Flow: Top to Bottom • Connection: 5/16" hex shank
BNR003- Specify Diameter	120 mm (4.75") or 140 mm (5.50") • Overall length: 60 cm (24") • Designed for concrete, mortars, plasters, heat-insulating plasters, and epoxy resin with sand, best for heavy and high viscosity materials. • Material Flow: Top to Bottom • Connection: M14 x 2 male threads
BNR004- Specify Diameter	120 mm (4.75") or 140 mm (5.50") • Overall length: 60 cm (24") • Designed for thinset, tile adhesive, grout, adhesive mortars, ready-mix mortars, and pointing mortars, and fillers, best for small volumes on high speed mixers. • Material Flow: Bottom to Top • Connection: M14 x 2 male threads
BNR005-120	Diameter: 120 mm $(4.75")$ • Overall length: 60 cm $(24")$ • Designed for plasters, adhesive mortars, tile adhesive and fillers, best for sticky and viscous materials. • Material Flow: Bottom to Top • Connection: M14 x 2 male threads
BNR006-100	Diameter: 100 mm (3.875") • Overall length: 60 cm (24") • Designed for paints, lacquers, glazings, primers, and paste, best for small volumes of low viscosity materials • Recommended to use on BNR6169. • Material Flow: Top to Bottom • Connection: M14 x 2 male threads







BNR008-120K Paddles sold in pairs left & right	Diameter: 120 mm (4.75") Overall length: 60 cm (24") • Designed for concrete, cement, mortars, and grouts with aggregate less than 3/8" diameter. Also for gypsum lime plaster, fibrated aluminum roof coatings and paints. Not for highly viscous materials. • Material Flow: Top to Bottom • Connection: 13 mm or ½" Hex Shank, for BN6402A mixer.
BNR009-Specify Diameter	120 mm (4.75") or 140 mm (5.50") • Overall length: 60 cm (24") • Designed for fillers, bitumen coatings, joint cement, epoxy-resin compounds, and grouting compounds, best for prevention of lump formation and lessens adding air into the mixture. Mixture flow is parallel. • Connection: M14 x 2 male threads
BNR010- Specify Diameter	120 mm (4.75") or 140 mm (5.50") • Overall length: 60 cm (24") • Designed for gypsum-lime plaster, fibrated aluminum roof coatings, and paints. This paddle can be disassembled in two pieces and fit into a carrying case. • Material Flow: Top to Bottom • Connection: M14 x 2 male thread



3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

Professional Material Mixers New From **BN Products - USA**

BN Products - USA is a distribution company started in 1925 in Northern California. The company moved all of it's holdings to Wickenburg, Arizona in 2001. Together with our employees we serve the construction wholesale industries with products including portable rebar cutters and benders and now with professional material mixers. Our products are sold through retail distributors around the world. We distribute quality products Engineered with intelligence and imagination.



BNR6169
1050 watt Hand-Held Paddle Mixer has a forward and reverse switch with a variable speed trigger and a lock-on button for continuous operation. Comes complete with a standard M14 paddle connection or 1/2" shank capacity for any mixing paddles. The D-handle rotates 360° with a 3-position removable side handle.



BNR6402K
1800 watt Hand-Held
Paddle Mixer is a powerful
2-speed mixer with double
shaft. This high-performance
tool has 2 paddles working clockwise and counter
clockwise respectively. It has
robust gearbox with a powerful high torque motor and
an ergonomically designed
handle with a soft grip feature. This mixer has a soft
start function and constant
speed control.



BNR6400
1800 watt Hand-Held Paddle Mixer has an ergonomically designed handle with a soft grip feature. This 2-speed power mixer has a soft start feature, variable speed and a constant speed control setting. The safety on/off switch also has a lock-on button for continous operation. The tool has a heavy-duty gearbox with a powerful high torque motor.



BNRA0315 1/2" Chuck Included with the BNR6169 and the BNR6208B



3450 Sabin Brown Road • Wickenburg, Arizona 85390 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

