




BN Products-USA, LLC.

3450 Sabin Brown Road • Wickenburg, Arizona 85390
(800) 992-3833 • (928) 684-2813 • www.bnproducts.com

BNT-40 Rebar Tier Parts Guide

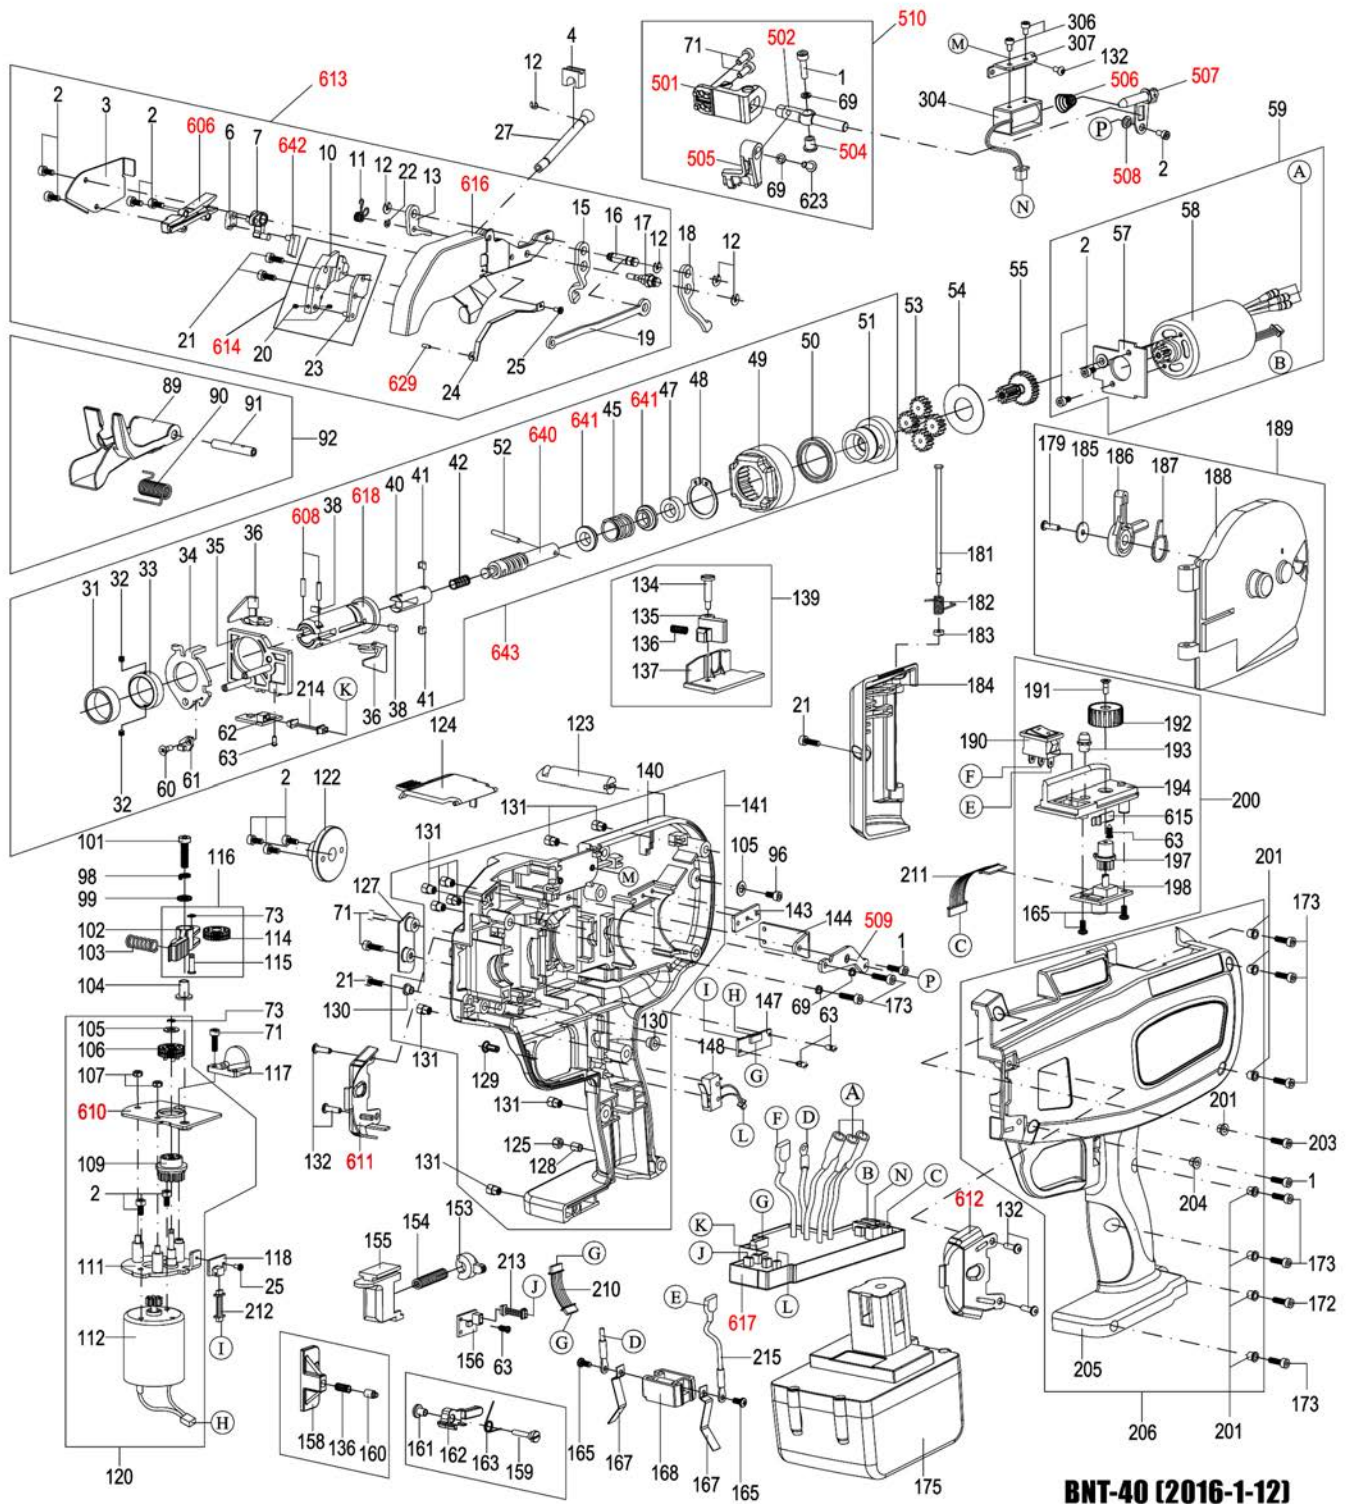

BNT-40 (2016-1-12)



BN Products-USA, LLC.

3450 Sabin Brown Road • Wickenburg, Arizona 85390
 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

PARTS Guide BNT-40

No.	Part No.	Description	Qty.
1	BNT-40-01	Hex Bolt M3×12	1
2	BNT-40-02	Hex Bolt M3×6	12
3	BNT-40-03	Cover Plate	1
4	BNT-40-04	Rubber Base	1
606	BNT-40-606	Wire Guide B	1
6	BNT-40-06	Connecting Plate 1	2
7	BNT-40-07	Cutter	1
642	BNT-40-642	Fixed Cutter	1
10	BNT-40-10	Wire Guide A	1
11	BNT-40-11	Torsion Spring 1	1
12	BNT-40-12	E-Ring 4	5
13	BNT-40-13	Cutter Lever B	1
616	BNT-40-616	Arm A unit	1
15	BNT-40-15	Cutter Lever A	1
16	BNT-40-16	Fixing Pin	1
17	BNT-40-17	Shaft Screw	1
18	BNT-40-18	Cutter Lever C	1
19	BNT-40-19	Connecting Rod 1	1
20	BNT-40-20	Inner Hex Locking Screw M2.5x3	2
21	BNT-40-21	Hex Bolt M3×10	3
22	BNT-40-22	E-Ring 2.5	2
23	BNT-40-23	Filler Piece	1
24	BNT-40-24	Leaf Spring	1
25	BNT-40-25	Pan-head Screw M2×4	2
613	BNT-40-613	Arm A unit Assy	1
27	BNT-40-27	Pipe	1
614	BNT-40-614	Wire Guide A Assy	1
629	BNT-40-629	Leaf Spring Pin 1.8×5.5	1
643	BNT-40-643	Twister Assy	1
31	BNT-40-31	Sleeve Guide	1
32	BNT-40-32	Hex Screw M3×4	2
33	BNT-40-33	Cutting Ring Guide	1
34	BNT-40-34	Cutting Plate	1
35	BNT-40-35	Tip Axis Guide Assy	1
36	BNT-40-36	Hook	2
608	BNT-40-608	Fixing Axis	2
38	BNT-40-38	Key A	2

No.	Part No.	Description	Qty.
618	BNT-40-618	Sleeve A	1
40	BNT-40-40	Tip Axis B	1
41	BNT-40-41	Key B	2
42	BNT-40-42	Comp. Spring 1	1
640	BNT-40-640	Tip Axis A	1
641	BNT-40-641	Pin 1	2
45	BNT-40-45	Comp. Spring 2	1
47	BNT-40-47	Bumper	1
48	BNT-40-48	C-ring 20	1
49	BNT-40-49	Internal Gear	1
50	BNT-40-50	Bearing	1
51	BNT-40-51	Planet Gauge Unit	1
52	BNT-40-52	Pin 5	1
53	BNT-40-53	Planet Gear	4
54	BNT-40-54	Gear Press Wheel	1
55	BNT-40-55	Sun Gear Unit	1
57	BNT-40-57	Motor Fixing plate	1
58	BNT-40-58	Motor 550-R2	1
59	BNT-40-59	Motor 550-R2 Assy	1
60	BNT-40-60	Countersunk screw M2×4	1
61	BNT-40-61	Magnetic Plate	1
62	BNT-40-62	Route PWB Unit	1
63	BNT-40-63	Pan-head Screw ST2.2×6	5
69	BNT-40-69	Spring Washer 3	2
71	BNT-40-71	Hex Bolt M3×8	5
73	BNT-40-73	E-Ring 2	4
89	BNT-40-89	Curl Guide	1
90	BNT-40-90	Curl Guide Spring	1
91	BNT-40-91	Stopper Shaft	1
92	BNT-40-92	Curl Guide Assy	1
96	BNT-40-96	SS Hex Bolt M3x12	1
98	BNT-40-98	Spring Washer 4	1
99	BNT-40-99	Washer 2	1
101	BNT-40-101	Hex Bolt M4×16	1
102	BNT-40-102	Release Lever	1
103	BNT-40-103	Comp.Spring 3	1
104	BNT-40-104	Hollow Pin 1	1
105	BNT-40-105	Washer	3



BN Products-USA, LLC.

3450 Sabin Brown Road • Wickenburg, Arizona 85390

(800) 992-3833 • (928) 684-2813 • www.bnproducts.com

No.	Part No.	Description	Qty.
106	BNT-40-106	Feeding Gear B1	1
107	BNT-40-107	Nut M3(T 2.4)	2
610	BNT-40-610	Partition Plate	1
109	BNT-40-109	Feeding Gear A	1
111	BNT-40-111	Conecting Plate Unit	1
112	BNT-40-112	Motor 540-R2	1
114	BNT-40-114	Feeding Gear B2	1
115	BNT-40-115	Step Pin 1	1
116	BNT-40-116	Release Lever Assy	1
117	BNT-40-117	Wire Guide C	1
118	BNT-40-118	Feeding PWB unit	1
120	BNT-40-120	Motor 540-R2 Assy	1
122	BNT-40-122	Reel Guide	1
123	BNT-40-123	Joint Reel Magazine	1
124	BNT-40-124	Window	1
125	BNT-40-125	Nut M3 (T4)	1
127	BNT-40-127	Strength Plate	1
128	BNT-40-128	Hollow pin 6	1
129	BNT-40-129	Cross head tapping screw ST2.2 × 7	1
130	BNT-40-130	Hollow Pin 3	2
131	BNT-40-131	Nut M3	8
132	BNT-40-132	Hex Bolt M3×8	4
611	BNT-40-611	Cover L Unit	1
134	BNT-40-134	Step Pin 2	1
135	BNT-40-135	Release Stopper	1
136	BNT-40-136	Comp. Spring 4	2
137	BNT-40-137	Reel Stopper	1
139	BNT-40-139	Reel Stopper Assy	1
140	BNT-40-140	Frame L	1
141	BNT-40-141	Frame L Assy	1
143	BNT-40-143	Fixing Plate 1	1
144	BNT-40-144	Fixing Plate 2	1
147	BNT-40-147	Motor 540-R2 PWB Unit	1
148	BNT-40-148	Trigger Switch	1
153	BNT-40-153	Trigger Lock	1
154	BNT-40-154	Comp. Spring 5	1
155	BNT-40-155	Trigger	1
156	BNT-40-156	Sensor PWB D Unit	1
158	BNT-40-158	Jaw	1

No.	Part No.	Description	Qty.
159	BNT-40-159	Switch Lever Block	1
160	BNT-40-160	Jaw Pin	1
161	BNT-40-161	Pin 4	1
162	BNT-40-162	Switch Lever	1
163	BNT-40-163	Torsion Spring 4	1
165	BNT-40-165	Pan-head Screw ST3×8	4
167	BNT-40-167	Electrode Plate	2
168	BNT-40-168	Electrode Block	1
612	BNT-40-612	Cover P Unit	1
172	BNT-40-172	Hex Bolt M3×16	1
173	BNT-40-173	Hex Bolt M3×14	8
617	BNT-40-617	Main PWB Unit	1
175	BNTLI-300	Li-ion Battery	1
179	BNT-40-179	Pan Head Screw M3×5	1
181	BNT-40-181	Step Pin 3	1
182	BNT-40-182	Torsion Spring 5	1
183	BNT-40-183	Rubber Washer	1
184	BNT-40-184	Motor Cover	1
185	BNT-40-185	Washer 3	1
186	BNT-40-186	Reel Stopper	1
187	BNT-40-187	Torsion Spring 6	1
188	BNT-40-188	Real Stay	1
189	BNT-40-189	Real Stay Assy	1
190	BNT-40-190	Main Switch Unit	1
191	BNT-40-191	Countersunk Scew M3×5	1
192	BNT-40-192	Adjusting Knob	1
193	BNT-40-193	LED Unit	1
194	BNT-40-194	Adjusting Plate	1
615	BNT-40-615	Adjusting Spring	1
197	BNT-40-197	Joint Knob	1
198	BNT-40-198	Adjusting PWB Unit	1
200	BNT-40-200	Main Switch Base Assy	1
201	BNT-40-201	Hollow Pin 7	7
203	BNT-40-203	Hex Bolt M3×18	2
204	BNT-40-204	Hollow Pin 5	1
205	BNT-40-205	Frame R	1
206	BNT-40-206	Frame R Assy	1
210	BNT-40-210	Motor 540-R2 Connecting Wire	1
211	BNT-40-211	Adjusting Connecting Wire	1



BN Products-USA, LLC.

3450 Sabin Brown Road • Wickenburg, Arizona 85390
 (800) 992-3833 • (928) 684-2813 • www.bnproducts.com

No.	Part No.	Description	Qty.
212	BNT-40-212	Feeding Connecting Wire	1
213	BNT-40-213	Sensor Connecting Wire	1
214	BNT-40-214	Rotating Connecting Wire	1
215	BNT-40-215	Battery Connecting Wire	1
301	BNT-40-301	Comp. Spring 6	1
302	BNT-40-302	Reel Press F	1
303	BNT-40-303	Reel Press Axis(solenoid)	1
304	BNT-40-304	Solenoid	1
305	BNT-40-305	Pin 6	1
306	BNT-40-306	Hex Bolt M3×3	2
307	BNT-40-307	Solenoid Fixing Plate	1
308	BNT-40-308	Spring Pin	1

No.	Part No.	Description	Qty.
309	BNT-40-309	Connecting Plate 2	1
501	BNT-40-501	BN Brake Guide	1
502	BNT-40-502	Step Pin 4	1
504	BNT-40-504	Pin 7	1
505	BNT-40-505	BN Reel Press A	1
506	BNT-40-506	BN Solenoid Spring	1
507	BNT-40-507	Solenoid Core Assy	1
508	BNT-40-508	Pin 8	1
509	BNT-40-509	Solenoid Core Pivot Assy	1
510	BNT-40-510	BN Brake Housing Assy	1
623	BNT-40-623	Pan Head Screw M3×10	1
---	BNT-LI-196B	Battery charger Not Shown	1

