

GMC[®]

SYCLONE

ULTRA QUIET OIL FREE AIR COMPRESSORS OWNER'S MANUAL

GMC. *SYCLONE* 4610

GMC. *SYCLONE* 6310



GMC[®]

SYCLONE

Customer Support
1-866-409-4581

TABLE OF CONTENTS

INTRODUCTION _____ 2

IMPORTANT SAFETY INSTRUCTIONS _____ 3

LOCATIONS OF IMPORTANT LABELS _____ 6

AIR COMPRESSOR COMPONENTS _____ 8

PRE-OPERATION CHECKLIST _____ 10

 Package Contents & Assembly _____ 10

 Inspect for Damage _____ 11

 Save Packaging _____ 11

 Compressor Location _____ 11

 Electrical Power _____ 12

OPERATING THE AIR COMPRESSOR _____ 12

 Introduction _____ 12

 Assembly _____ 12

 Test Run & Break-in Period _____ 13

 Daily Operation _____ 13

MAINTENANCE _____ 14

 Draining the Air Tank _____ 14

 Changing the Air Filter _____ 14

 Testing for Leaks _____ 14

 Adjusting the Pressure Switch _____ 14

 Cleaning _____ 14

STORAGE _____ 14

TROUBLESHOOTING _____ 15

SPECIFICATIONS _____ 16

 Electrical Circuit _____ 16

 Air Passage Drawing _____ 16

WARRANTY _____ 17

PRODUCT REGISTRATION _____ 20

INTRODUCTION

! WARNING

This manual contains important instructions for operating this product. For your safety, and the safety of others, be sure to read this manual thoroughly before operating the product.

Failure to properly follow all the instructions and precautions can cause you and others to be seriously hurt or killed.

Thank you for purchasing a GMC® Syclone Air Compressor.

Record the model and serial numbers indicated on your air compressor's nameplate:



Model No. _____

Serial No. _____

Date of Purchase: _____

Store/Dealer: _____

Model: GMC® Syclone 4610

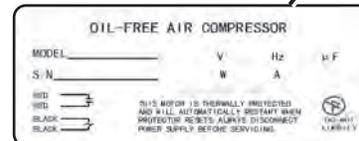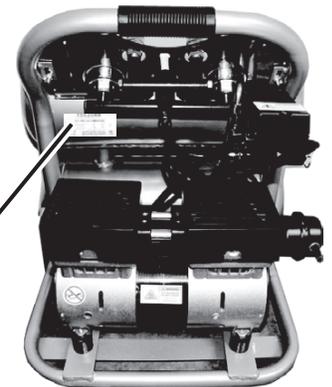

Model: GMC® Syclone 6310



The GMC® Trademark is used under license from General Motors Corporation. GMC® or General Motors Corporation makes no representation or warranties with respect to this product.

How to find a local service center:

Even quality built equipment, such as the GMC® Air Compressor you purchased, might need service or repair parts. Contact the California Air Tools GMC® Air Compressor Customer Service Department:

Phone: 1-866-409-4581

Online: www.GMCAIRCOMPRESSORS.com

Please provide the information below:

- Model number and Serial number and specifications shown on the Model number/Serial number plate.
- Part number or numbers shown in the parts list section of the owner's manual for your air compressor model.
- A brief description of the trouble with the air compressor.

Do not return your air compressor for service or parts to the store/dealer where purchased or any GMC® or GM car/truck dealership.

IMPORTANT SAFETY INSTRUCTIONS

Safety Messages & Signal Words:**⚠ DANGER**

Indicates an immediate hazardous situation which, if not avoided, will result in death or serious injury to the operator or to bystanders.

⚠ WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury to the operator or to bystanders.

⚠ CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in moderate or minor injury to the operator or to bystanders.

NOTICE

Indicates a situation which, if not avoided, may result in damage to product components or other property.

⚠ DANGER**KICKBACK**

Moving parts can cause severe trauma.

Keep hands and feet away from rotating parts, tie up long hair, remove jewelry, and DO NOT wear loose clothing.

⚠ DANGER**SHOCK**

There is a danger of electric shock.

Use only undamaged electrical cords.

DO NOT touch bare wires or receptacles.

DO NOT operate air compressor in wet weather or in wet conditions.

DO NOT touch air compressor or cords if hands or feet are wet.

Ensure that all cords are free of damage before connecting to the power supply.

Ensure that you have a sufficient electrical supply for supporting the requirements of the motor.

! WARNING



RISK TO BREATHING

Dust or dust-like particulates caused by power-sanding, sawing, grinding, drilling or any other construction-like activities can contain contaminants that are harmful to breathe.

Always use your air compressor in a well-ventilated and clean area.

Never breathe the air that comes directly out of the air compressor or air hose. This air is not suitable for breathing.

Always wear approved safety equipment. When performing dust-creating activities, securely wear properly-fit face masks or respirators.

If you feel ill from breathing while operating your air compressor, stop and seek medical attention immediately.

! WARNING



FLYING OBJECTS

Flying objects can cause injury to the eyes, head and other parts of the body.

Air-powered equipment and power tools are capable of propelling items (metal chips, fasteners and particulates) at high speed into the air and could result in injury.

Always wear approved head and eye protection.

Never point the air stream at any part of your body, or at another person or animal.

When operating the air compressor, make sure all other people and animals maintain a safe distance.

Do not move the air compressor when the air tank is under pressure.

Never use the air hoses to pull or move the air compressor.

Keep the air compressor on a flat surface.

! WARNING



HOT SURFACE



FIRE

Air compressor surfaces become hot during operation.

DO NOT touch hot surfaces, because they can cause severe burns.

Do not touch the air compressor's cylinder head. During operation, the cooling fins of the cylinder head and delivery pipe become hot.

Allow the air compressor to cool before touching it.

DO NOT place a storage cover on the unit during operation. Only place a cover on the air compressor after it has thoroughly cooled down.

! WARNING



EXPLOSION

Exercise caution when using pressurized air.

To prevent injury and for your general safety, only use high-pressure hoses, fittings and couplings designed for use with air compressors.

Inspect all hoses, fittings and couplings for leaks and wear. When leaks and wear are detected, stop use and replace those items immediately. Do not repair.

Never leave pressurized air in the air tank when performing maintenance.

Never leave the air compressor unattended with the power supply in use and the air hose connected.

⚠ WARNING**EXPLOSION**

Improper care could lead to the air tank bursting or exploding.

Drain air tank daily or after each use to prevent moisture buildup in the air tank.

Rust can weaken the air tank and cause leaks or bursting. If rust is detected, replace tank immediately. Do not try to repair the air tank by welding, drilling or modifying it in any other way. These modifications can weaken the air tank and cause a hazardous condition.

If air tank develops a leak, replace the air tank immediately. Never repair, weld or make modifications to the air tank or its attachments.

Never make adjustments to the factory-set pressures.

Never exceed manufacturer's maximum-allowable pressure rating attachments.

Because of extreme heat, do not use plastic pipe or lead tin solder joints for a discharge line.

⚠ WARNING**EXPLOSION****FIRE**

Use caution to minimize risk of fire or explosion.

It is normal for the air compressor motor and pressure switch to produce sparks while operating. If sparks come in contact with vapors from gasoline or solvents, they may ignite and cause a fire or explosion.

Abrasive tools such as grinders, drills and other tools are capable of making sparks that can ignite flammable materials.

Always operate the air compressor a safe distance away from flammable items. Use in well-ventilated areas.

Never exceed the maximum rated pressure.

⚠ CAUTION

Use caution when using extension cords.

Use an extension cord which is no more than 25 feet long and at least 14 gauge.

Using an excessively long or thin-wired extension cord will cause severe damage to the motor.


Use only a 3-wire extension cord that has a 3-blade grounding plug.

LOCATIONS OF IMPORTANT LABELS

Read these important labels before operating.



These labels provide important safety and maintenance information. These labels should be considered as permanent parts of the air compressor. Should any of these labels become illegible, damaged or removed, please contact California Air Tools GMC® Air Compressors Customer Service department at 1-866-409-4581 for replacements.

Model: GMC® Cyclone 4610

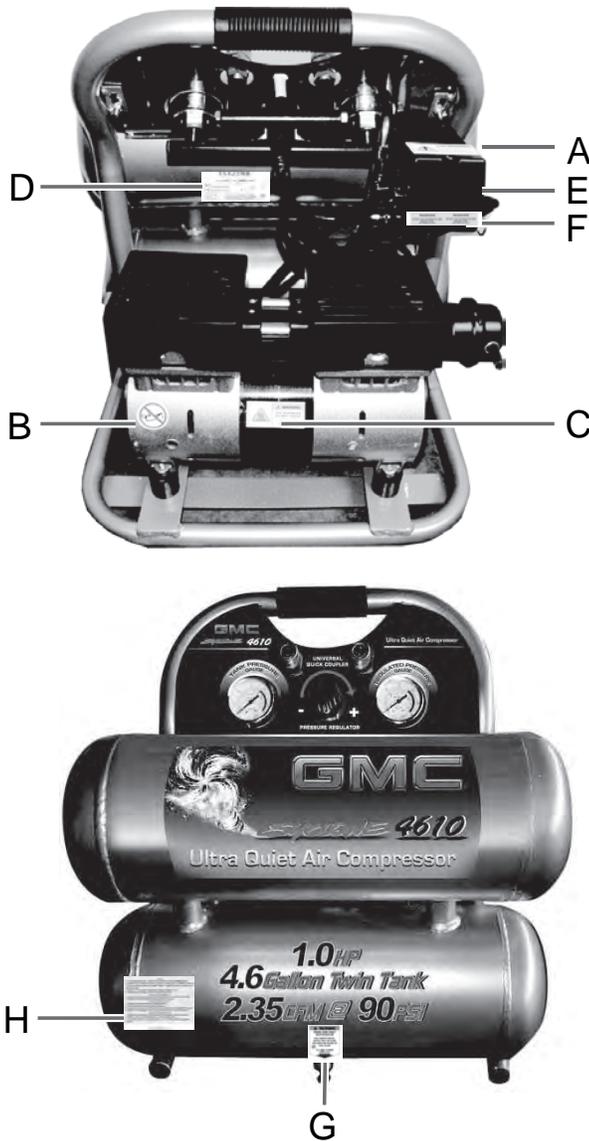

PRODUCT LABEL	
A	
B	
C	
D	
E	
F	
G	
H	<p>Note:</p> <ol style="list-style-type: none"> The air compressor should only be placed in a well-ventilated and clean area. Keep the air compressor on a firm and flat surface, with adequate space surrounding it for ventilation. If the air compressor needs repair or becomes damaged, turn off the power and drain the tank. Motors cannot be more than 10% lower or higher than the standard voltage. When the compressor is running, do not touch its hot surfaces. <p>Routine maintenance</p> <ol style="list-style-type: none"> Always listen for unusual sounds, vibrations or high-pitched noises. Open the drain valves to empty the air tank at least once per day. <p>Weekly maintenance</p> <ol style="list-style-type: none"> Clean the air filter weekly. Replace it with a new one after 500 hours of use. Open the safety valve to ensure that it is operational. Ensure that the pressure switch and check valve are operating normally. Inspect all screws and connections, and tighten if any are loose. <p>Quarterly maintenance</p> <ol style="list-style-type: none"> Inspect all screws and connections, and tighten if any are loose. Clean the compressor's exterior, and check for leaky connections. Check the valve plate, valve, piston rings, etc., to ensure that they are operating normally.


Model: GMC® Syclone 6310

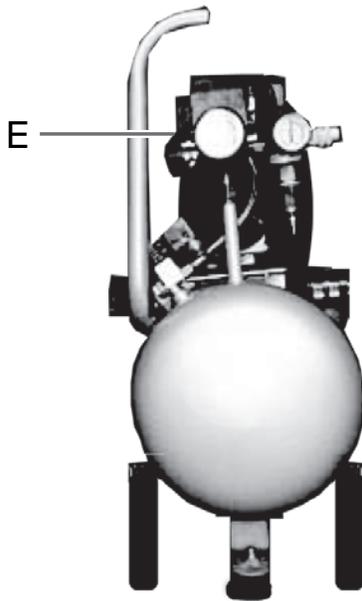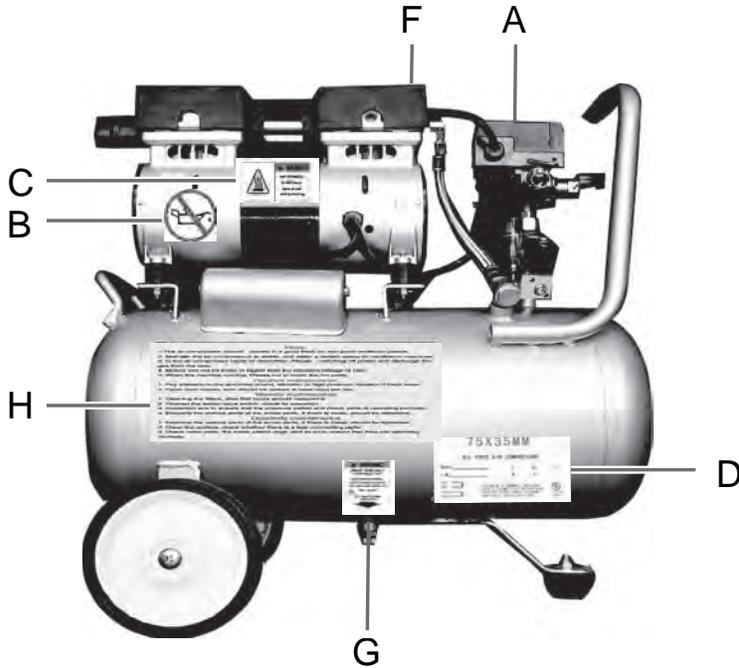


PRODUCT LABEL	
A	
B	
C	
D	
E	
F	
G	
H	<p>Note:</p> <ol style="list-style-type: none"> The air compressor should only be placed in a well-ventilated and clean area. Keep the air compressor on a firm and flat surface, with adequate space surrounding it for ventilation. If the air compressor needs repair or becomes damaged, turn off the power and drain the tank. Motors cannot be more than 10% lower or higher than the standard voltage. When the compressor is running, do not touch its hot surfaces. <p>Routine maintenance</p> <ol style="list-style-type: none"> Always listen for unusual sounds, vibrations or high-pitched noises. Open the drain valves to empty the air tank at least once per day. <p>Weekly maintenance</p> <ol style="list-style-type: none"> Clean the air filter weekly. Replace it with a new one after 500 hours of use. Open the safety valve to ensure that it is operational. Ensure that the pressure switch and check valve are operating normally. Inspect all screws and connections, and tighten if any are loose. <p>Quarterly maintenance</p> <ol style="list-style-type: none"> Inspect all screws and connections, and tighten if any are loose. Clean the compressor's exterior, and check for leaky connections. Check the valve plate, valve, piston rings, etc., to ensure that they are operating normally.

AIR COMPRESSOR COMPONENTS

Model: GMC® Syclone 4610

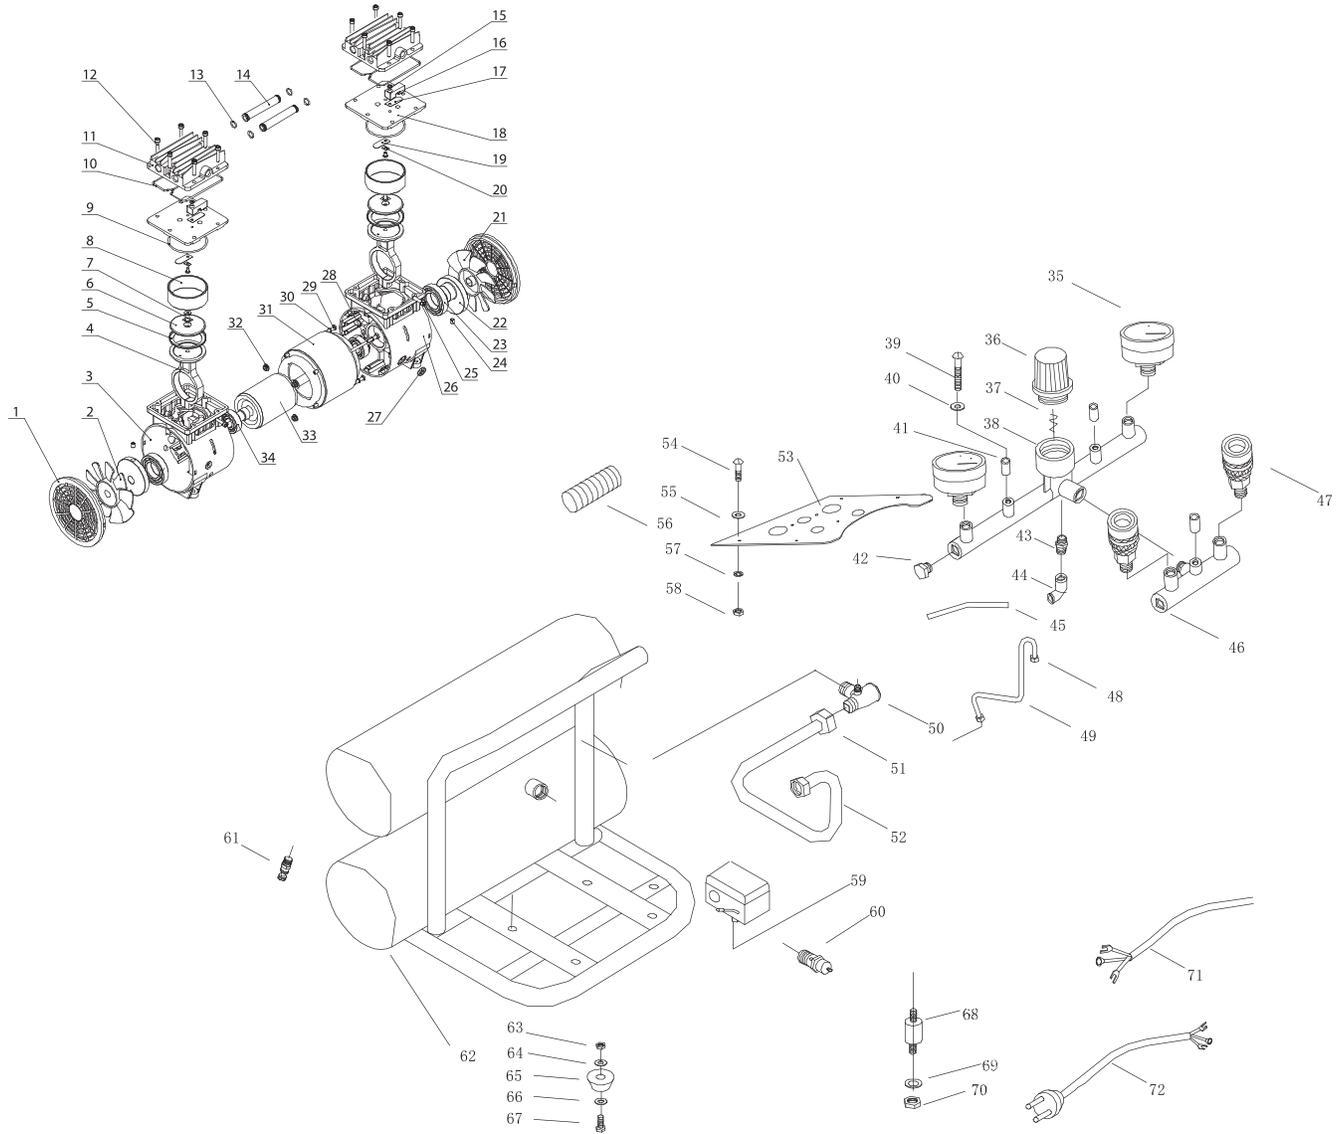

NO.	Description	NO.	Description	NO.	Description	NO.	Description
1	Fan Cowl	19	Air Inflow Valve Plate	37	Spring	55	Washer
2	Fan	20	Metal Strengthen Sheet	38	Support I	56	Handle
3	Case	21	Fan	39	Bolt	57	Spring
4	Connecting Bar	22	Crank	40	Washer	58	Nut
5	Piston Cup	23	Bearing	41	Joint	59	Pressure Switch
6	Plate Pinch	24	Holding Screw	42	Bolt	60	Safety Valve
7	Pressure Plate Screw	25	Cheese Head Screw	43	Connect	61	Drain Cook
8	Cylinder	26	Case	44	Elbow Exhaust	62	Tank
9	Cylinder Obturating Ring	27	Leading-out Line Guard Circle	45	Pipe	63	Nut
10	Cylinder Head Obturating Ring	28	Rotor Pin	46	Support II	64	Washer
11	Cylinder Head	29	Electrical Motor Bolt	47	Quick Connect	65	Cushion Foot
12	Cylinder Head Screw	30	Grower Washer	48	Unloading Nut	66	Washer
13	Connecting Hose Obturating Ring	31	Stator	49	Unloading Pipe	67	Bolt
14	Connecting Hose	32	Lock Nut	50	Check Valve	68	Foot
15	Pan Head Screw	33	Rotor	51	Exhaust Nut	69	Washer
16	Limited Block	34	Bearing	52	Exhaust Pipe	70	Nut
17	Gassing Valve Plate	35	Pressure Guage	53	Panel	71	Electrical Wire
18	Valve Plate	36	Regulator	54	Bolt	72	Plug

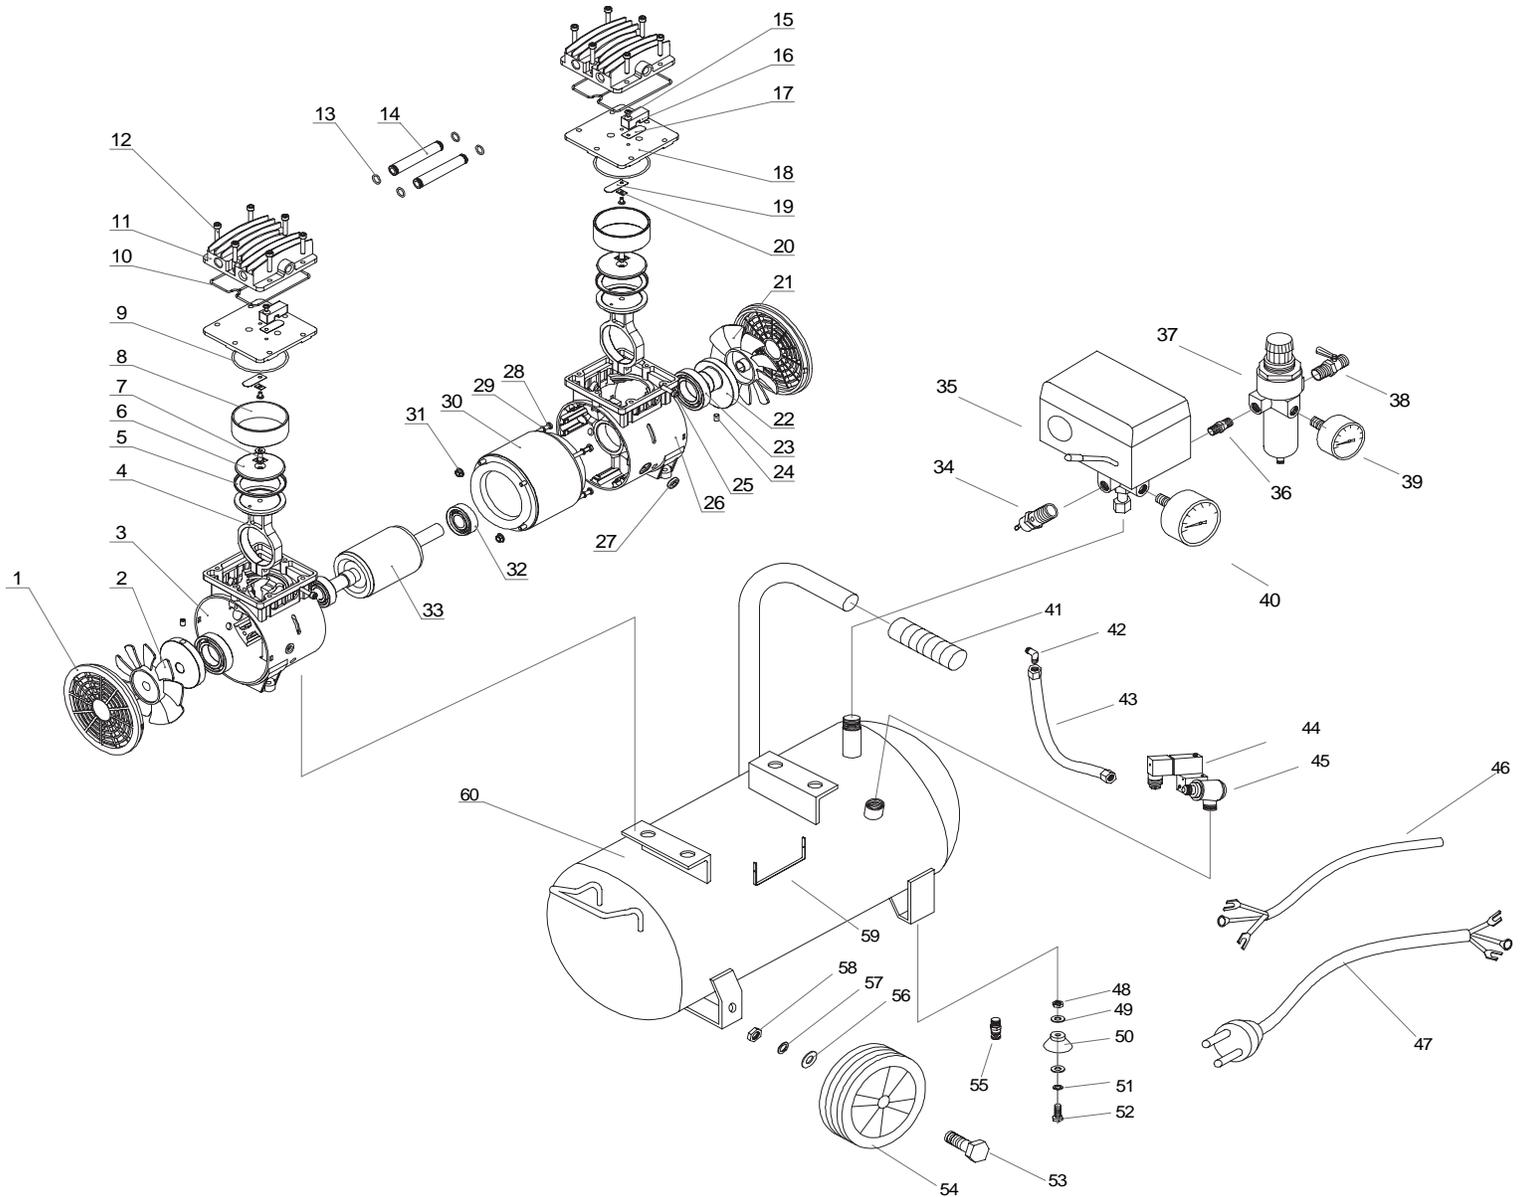

NO.	Description	NO.	Description	NO.	Description
1	Fan Cover	21	Fan	41	Handle Cover
2	Fan	22	Crank	42	Elbow
3	Crank Case	23	Bearing	43	Exhaust Pipe
4	Connecting Rod	24	Holding Screw	44	Electromagnetism Valve
5	Piston Ring	25	Cheese Head Screw	45	Check Valve
6	Plate Pinch	26	Crank Case	46	Power Cord
7	Pressure Plate Screw	27	Leading-out Line Guard Circle	47	Power Cord with Plug
8	Cylinder	28	Motor Screw	48	Nut
9	Cylinder Obturating Ring	29	Spring Washer	49	Washer
10	Cylinder Head Obturating Ring	30	Stator	50	Cushion Foot
11	Cylinder Head	31	Lock Nut	51	Washer
12	Cylinder Head Screw	32	Bearing	52	Bolt
13	Connecting Hose Obturating Ring	33	Rotor	53	Bolt
14	Connecting Hose	34	Safety Valve	54	Wheel
15	Pan Head Screw	35	Pressure Switch	55	Drain Valve
16	Limited Block	36	Connecting Bar	56	Washer
17	Gassing Valve Plate	37	Regulator	57	Spring Washer
18	Valve Plate	38	Air Cock	58	Nut
19	Air Inflow Valve Plate	39	2" Pressure Gauge	59	Capacitance Holder
20	Metal Strengthen Sheet	40	2.5" Pressure Gauge	60	Air Tank

PRE-OPERATION CHECKLIST

Package Contents & Assembly

Model: GMC® SYCLONE 4610

Package contents:

- Air Compressor
- Owner's Manual
- Air Filter

Assembly:

- Attach the air filter and screw it in properly.



Model: GMC® SYCLONE 6310

Package contents:

- Air Compressor
- Owner's Manual
- Air Filter
- Wheel Assembly Kit


1. Bolt #53 (2)
2. Wheel #54 (2)
3. Washer #56 (2)
4. Spring Washer #57 (2)
5. Nut #58 (2)

Assembly:

- Attach the air filter and screw it in properly.



- Install the wheel assembly as follows:
 1. Slide bolt #53 through wheel #54.
 2. Slide washer #56 and spring washer #57 onto the end of bolt #53.
 3. Slide the end of bolt #53 through the wheel support hole on the compressor.
 4. Attach nut #58 onto bolt #53 and tighten.
 5. Repeat steps 1-4 to assemble the other wheel.

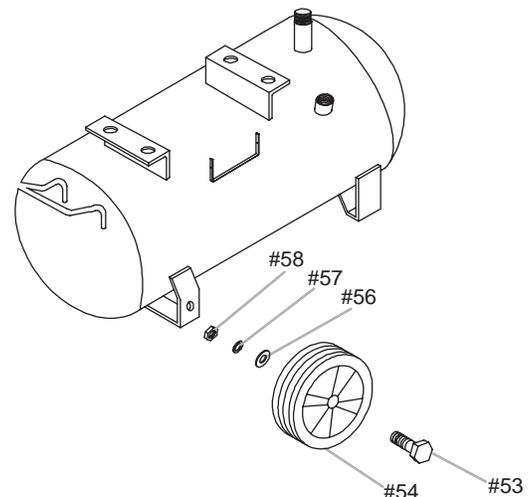

Inspect for Damage

Before using the air compressor, make sure the air tank is not damaged, inspect all parts for damage, and check that all pipes are firmly connected.

Do not use the air compressor if any damage is found. If damaged, have an authorized service center inspect and test the air compressor to ensure that is working properly.

Save Packaging

Save all outside packaging in case you ever need to return the product for service or repair.

Compressor Location

Use on Flat Surface

For proper operation, the air compressor must be placed on a flat surface with an incline no greater than 15 degrees.

Maintain a Clear Area

It is very important that the air compressor is positioned so that there is adequate airflow around the machine. There must be at least 2 feet of obstacle-free space surrounding and above the air compressor.

!WARNING



EXPLOSION



FIRE

Use caution to minimize risk of fire or explosion.

It is normal for the air compressor motor and pressure switch to produce sparks while operating. If sparks come in contact with vapors from gasoline or solvents, they may ignite and cause a fire or explosion.

Abrasive tools such as grinders, drills and other tools are capable of making sparks that can ignite flammable materials.

Always operate the air compressor a safe distance away from flammable items. Use in well-ventilated areas.

Never exceed the maximum rated pressure.

!WARNING



RISK TO BREATHING

Dust or dust-like particulates caused by power-sanding, sawing, grinding, drilling or any other construction-like activities can contain contaminants that are harmful to breathe.

Always use your air compressor in a well-ventilated and clean area.

Never breathe the air that comes directly out of the air compressor or air hose. This air is not suitable for breathing.

Always wear approved safety equipment. When performing dust-creating activities, securely wear properly-fit face masks or respirators.

If you feel ill from breathing while operating your air compressor, stop and seek medical attention immediately.

Use in Areas with Clean Air

For proper operation and to maximize the longevity of the air compressor, it is very important that the air drawn into the air compressor is clean. The air compressor should not be used in areas where dust or particulates are in the air. This will damage the motor and impair proper operation.

IMPORTANT: Always use the air filter, properly installed.

Electrical Power

Electrical Power Requirements

⚠ DANGER



SHOCK

There is a danger of electric shock.

Use only undamaged electrical cords.

DO NOT touch bare wires or receptacles.

DO NOT operate air compressor in wet weather or in wet conditions.

DO NOT touch air compressor or cords if hands or feet are wet.

Ensure that all cords are free of damage before connecting to the power supply.

Ensure that you have a sufficient electrical supply for supporting the requirements of the motor.

- Before using the air compressor, refer to the serial label for voltage and amperage requirements. Make sure you have a sufficient electrical supply for supporting the motor's requirements.
- Use a dedicated circuit for the best results.
- Low voltage and/or an overload circuit can cause the motor's overload protection system circuit breaker to trip.

Electrical Extension Cords

⚠ CAUTION

Use caution when using extension cords.

Use an extension cord which is no more than 25 feet long and at least 14 gauge.

Using an excessively long or thin-wired extension cord will cause severe damage to the motor.

Use only a 3-wire extension cord that has a 3-blade grounding plug.

- Inspect all electrical extension cords to ensure that they are free of damage.
- When using an extension cord, use a heavy-duty cord that is no more than 25 feet long and at least 14 gauge.
- Use only a 3-wire extension cord that has a 3-blade grounding plug.

OPERATING THE AIR COMPRESSOR

Save this manual for future reference.

⚠ WARNING

This manual contains important instructions for operating this product. For your safety, and the safety of others, be sure to read this manual thoroughly before operating the product.

Failure to properly follow all the instructions and precautions can cause you and others to be seriously hurt or killed.

Introduction

- This air compressor features a compact structure, stable performance, a high airflow rate, and easy operation and maintenance. Because the air compressor produces no oil in the airflow, it can be used as an independent air supply machine for situations in which oil in the airflow is an issue.
- The motor directly drives the eccentric wheel-connecting bar system, making the piston move reciprocally. The piston is made from a high-temperature-resistant and abrasion-resistant nonmetallic material, and is able to function without lubrication for a long time.
- Compressed air discharges in the air tank. A pressure meter displays the pressure inside the tank. When the pressure inside the tank rises to 8 bar, the power is automatically cut off by the pressure-control switch. When the pressure inside the tank lowers to 6 bar, the power is turned back on by the pressure-control switch. This gradually raises the pressure in the air tank. This procedure happens repeatedly.

Assembly

1. Connect your air supply hose to the the quick-connect coupling.
2. Make sure the drainage valve is off and that the pressure switch is in the OFF position.
3. Ensure that the power supply you are going to use is operating normally.
4. Insert the power supply cord into the power supply socket.

Test Run & Break-in Period

Before using the air compressor for the first time, complete a test run as follows:

1. Close the drainage valve and air supply valve. Make sure the reading on the pressure gauge is below 6 bar.
2. Start the air compressor by turning the power switch to the ON position. The pressure gauge reading will slowly rise as pressure increases inside the air tank. When the gauge reading reaches 8 bar, the pressure switch will automatically turn the power off. The solenoid valve will activate in order to release high pressure in the cylinder, eventually allowing the motor to start again.
3. During the period of time when the compressor has stopped running, make sure the pressure gauge reading is decreasing. If there is any air leakage from the compressor, open the air supply valve to begin the supply of compressed air. When the pressure in the air tank decreases to 6 bar, the pressure switch resets and the motor automatically turns back on.
4. The pressure in the air tank should increase until 8 bar is reached, then the motor should shut off until the pressure has dropped to 6 bar again. If the air compressor continues to automatically stop and start in this manner, it is working normally.
5. Allow the compressor to operate (automatically stopping and starting) for 15 minutes, in order to break in the internal working parts. After the 15-minute break-in period, turn the power switch to the OFF position and unplug the power supply cord from the power supply socket. The test run is complete.

Daily Operation

!WARNING



HOT SURFACE



FIRE

Air compressor surfaces become hot during operation.

DO NOT touch hot surfaces, because they can cause severe burns.

Do not touch the air compressor's cylinder head. During operation, the cooling fins of the cylinder head and delivery pipe become hot.

Allow the air compressor to cool before touching it.

DO NOT place a storage cover on the unit during operation. Only place a cover on the air compressor after it has thoroughly cooled down.

!WARNING



FLYING OBJECTS

Flying objects can cause injury to the eyes, head and other parts of the body.

Air-powered equipment and power tools are capable of propelling items (metal chips, fasteners and particulates) at high speed into the air and could result in injury.

Always wear approved head and eye protection.

Never point the air stream at any part of your body, or at another person or animal.

When operating the air compressor, make sure all other people and animals maintain a safe distance.

Do not move the air compressor when the air tank is under pressure.

Never use the air hoses to pull or move the air compressor.

Keep the air compressor on a flat surface.

Starting the compressor:

1. Turn the power switch to the OFF position.
2. Close the drainage valve.
3. Plug the power supply cord into a power supply socket.
4. Turn the power switch to the ON position.

Shutting down the compressor:

1. Turn the power switch to the OFF position.
2. Unplug the power supply cord.
3. Reduce the pressure in the air tank through the air supply hose.

MAINTENANCE

Draining the Air Tank

The frequency at which you should drain the air tank depends on the environmental conditions and the amount of operating time logged. The average draining frequency is every 2 to 3 days.

1. Place the drain pipe connected to the drain valve in a container capable of holding water.
2. With compressed air in the air tank, slowly turn the drain valve knob counterclockwise. The water in the air tank will drain out.
3. After all of the accumulated water has drained out of the pipe, turn the drain valve knob clockwise until it is tight, in order to avoid leakage.

Changing the Air Filter

An air filter is installed on the compressor's air inlet. This helps prevent the dust in the air from entering the air compressor, and reduces noise.

After being used for a period of time, the air filter will become clogged. This will reduce the air intake capabilities of the air compressor, reducing performance. Therefore, the air filter must be replaced regularly.

1. Open the lid on the air filter, then remove the old filter.
2. Replace it with a new filter, then close the lid.

Testing for Leaks

Make sure all connections are tight. Do not overtighten.

A small leak in any hose or pipe connection will reduce the air compressor's performance.

To test for small leaks, spray a small amount of soapy water on the area suspected of leaking. If the soap bubbles, replace the broken part.

Adjusting the Pressure Switch

The pressure switch is used to control the automatic stop-and-start function of the air compressor, ensuring the correct pressure of the compressed air in the air tank is maintained.

If the pressure of the compressed air in the air tank is found not to be in the standard range set by the manufacturer, the pressure switch must be adjusted to correctly set the activation valve. (The pressure at which the air compressor will stop running is 8 bar, and the pressure at which the air compressor will start running again is 6 bar.)

Adjust the pressure switch as follows:

1. Open the casing to access the pressure switch.
2. Adjust the setting screw for the maximum pressure. Turning the setting screw clockwise makes the activation pressure higher, so the pressure at which the air compressor stops running will be higher.
3. Adjust the setting screw for pressure difference. Turning the setting screw clockwise makes for a larger pressure difference, so the difference between the pressure at which the air compressor starts and the pressure at which the air compressor stops is larger.

Gradual adjustments should make the activation pressures within the range set by the manufacturer.

Cleaning

Clean items with a soft brush, or wipe with a moistened cloth using a biodegradable solvent.

Do not use flammable liquids such as gasoline or alcohol. Always keep parts clean from dirt and dust for better performance.

STORAGE

Before storing for a prolonged period of time:


1. Turn off the power supply.
2. Disconnect the power cord from the power supply.
3. Pull the relief valve and release all the pressure from the air tank.
4. Clean the air compressor to remove all dirt and dust.
5. Cover the air compressor with a cover to protect the unit from dust and moisture.
6. Do not stack or store any items on top of or around the air compressor. Damage could occur.

TROUBLESHOOTING


PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTIONS
Pressure drop in the tank.	Air leaks at connections.	Let the compressor build pressure in the tank, to the maximum pressure if possible. Brush soapy water on air connections and look carefully for air bubbles. Tighten leaky connections. If the problem persists, contact the seller for further advice.
The solenoid valve leaks when the compressor is idle.	Non-return valve seal is defective.	Let the air in the tank flow out until all the pressure is released. Then remove the non-return valve plug and clean the valve seal. If necessary, replace the seal and then reinstall all components.
The compressor stopped and does not start.	Overload cutout operated because of motor overheating.	Check that the main voltage corresponds to specifications. An extension cord that is too thin or too long can cause a voltage drop and cause the motor to overheat. Allow the motor to cool down. Use heavy duty extension cords. Ensure that the compressor is plugged into a socket as close as possible to the consumer unit or fuse box.
	Motor windings are burned out.	Contact Customer Support.
The motor does not start and makes a humming noise.	Capacitor is burned out.	Replace starter capacitor.
The motor does not start or starts slowly.	Low voltage supply to the motor.	Check that the main voltage corresponds to specifications. An extension cord that is too thin or too long can cause a voltage drop and cause the motor to overheat. Allow the motor to cool down. Use heavy duty extension cords. Ensure that the compressor is plugged into a socket as close as possible to the consumer unit or fuse box.
The compressor is noisy with metallic clangs.	Compressor head gasket broken or valve faulty.	Stop the compressor and contact the dealer.
The compressor does not reach the maximum pressure.	Compressor head gasket broken or valve faulty.	Stop the compressor and contact the dealer.
The compressor doesn't seem to provide as much air as it did when new and/or the compressor cuts off within a much shorter time period.	The pressure switch needs adjusting.	Stop the compressor and contact the dealer.
	The tank is full of water due to condensation.	Open the ball valve and release the pressure. Open the drain valve and release the water within the tank.
The motor pump unit does not stop when the tank pressure reaches its maximum working pressure (8 bar or 116 PSI) and the safety valve vents air.	Pressure switch defective or needs adjusting.	Stop the compressor immediately and contact Customer Support.

SPECIFICATIONS

Electrical Circuit

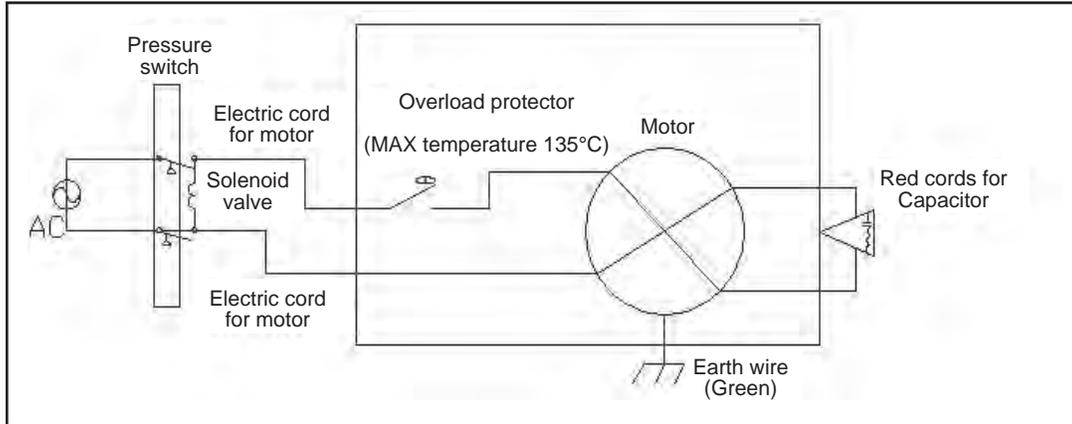

Air Passage Drawing

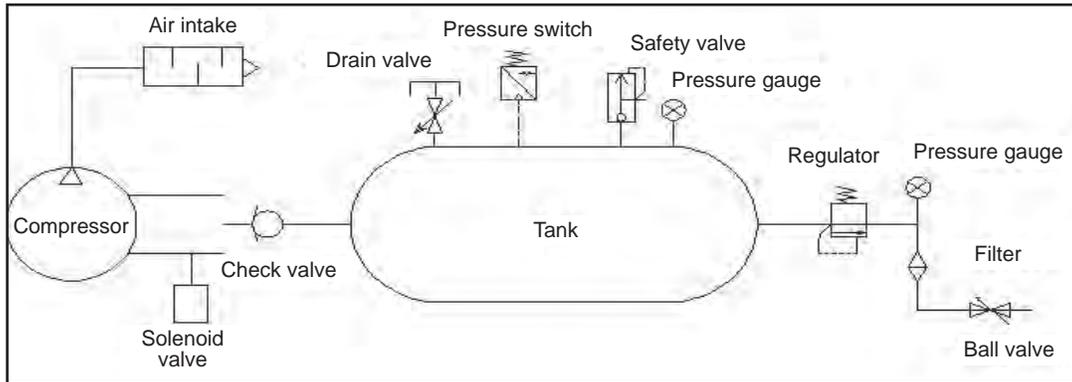

Air Compressor Model	Syclone 4610	Syclone 6310
Output @ 40 PSI	3.80 CFM	3.80 CFM
Output @ 90 PSI	2.35 CFM	2.35 CFM
Maximum Pressure	116 PSI / 8 Bar	116 PSI / 8 Bar
Displacement	125 / Seconds	150 / Seconds
Engine		
Engine Type	Electric / Copper Wiring	Electric / Copper Wiring
Horsepower	1.0 hp	1.0 hp
Engine Speed	1680 RPM	1680 RPM
Voltage / Hertz	115V / 60HZ	115V / 60HZ
Features		
Pump	Oil-Free	Oil-Free
Decibel Level	60 db	60 db
Tank Capacity	4.6 Gallons (18 Liters)	6.3 Gallons (24 Liters)
Tank Type	Steel	Steel
Pressure Control Meter	2	2
Universal Quick Connectors	2	1
Thermal Overload Protection	Yes	Yes
Dimensions		
Length	19.5 inches (49.5 cm)	22.8 inches (58.0 cm)
Width	17.1 inches (43.5 cm)	12.6 inches (32.0 cm)
Height	19.5 inches (49.5 cm)	22.8 inches (58.0 cm)
Weight	55 lbs (25 kg)	66 lbs (30 kg)

CALIFORNIA AIR TOOLS INC. LIMITED WARRANTY

This warranty is limited to the GMC® Syclone Air Compressors distributed by:

California Air Tools, Inc.
8560 Siempre Viva Road, Unit 3A
San Diego, CA 92154

Limited Warranty

California Air Tools Inc. will repair or replace, free of charge, to the original retail customer who purchased a GMC® Syclone Air Compressor from an authorized dealer, distributor or distributor's dealer in North America.

This warranty does not transfer to subsequent owners.

California Air Tools Inc. will repair or replace, at its option, any parts of the portable air compressor that are proven by an authorized service center to be defective in material or workmanship under normal use during the applicable warranty time period as stated below. This limited warranty covers the cost of the replacement parts and labor for all defects when installed by an authorized service center. Transportation charges are the responsibility of the customer. Any part replaced under warranty becomes the property of California Air Tools Inc.

All parts replaced under warranty will be considered as part of original product, and any warranty on those parts will expire coincident with the original product warranty.

Limited Warranty Periods

Non-commercial / Non-rental (personal use by a retail customer):	1 year parts and labor
Commercial / Rental (usage for income, business use):	1 year parts and labor

The limited warranty period begins on the date of retail purchase by the original purchaser.

Disclaimers, Limitations of Remedies & Exclusions

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

Disclaimer of Other Warranties

To the fullest extent permitted by applicable law, this limited warranty is exclusive and expressly in lieu of any and all other warranties, including, without limitation, any implied warranties of merchantability or fitness for a particular purpose or any other implied warranties that may arise from the course of dealing or usage of the trade. California Air Tools Inc. hereby disclaims and excludes all other warranties. To the extent that California Air Tools Inc. products are consumer products under applicable federal and state law with respect to any customer, the duration of any implied warranties (including but not limited to implied warranties of merchantability or fitness for a particular purpose) are limited to the shortest duration permitted by applicable law or the Limited Warranty period provided herein, whichever is longer.

Limitations of Remedies

California Air Tools Inc. shall not be liable to customer, or anyone claiming under customer, for any other obligations or liabilities, including but not limited to, obligations or liabilities arising out of breach of contract or warranty, negligence or other tort or any theory of strict liability, with respect to the air compressor or California Air Tools Inc. acts or omissions or otherwise. To the fullest extent permitted by applicable law, California Air Tools Inc. shall not in any event be liable for incidental, compensatory, punitive, consequential, indirect, special or other damages, including but not limited to loss of use, loss of income, loss of time, loss of sales, injury to personal property, or liability customer incurs with respect to any other person, or any other type or form of consequential damage or economic loss.

Exclusions

In addition to the foregoing disclaimers, limitations and terms, this limited warranty shall not apply to and does not cover accessories, nor does it cover products that are in any way subject to any of the following:

1. Improper setup, installation or storage.
2. Lack of proper maintenance and service.
3. Accident, damage, abuse or misuse.
4. Abnormal operating conditions or applications.
5. Repair or modification by customer or any third party without written consent of California Air Tools Inc.
6. Use under operating conditions or in applications not recommended by California Air Tools Inc.
7. Normal wear.
8. The use of accessories or attachments not recommended by California Air Tools Inc.
9. Acts of God.

The application of these exclusions will be determined at the sole discretion of California Air Tools Inc.

Registration

Warranty registration with California Air Tools Inc. GMC® Syclone Air Compressors is required on all products.

You can mail the enclosed registration form or fill it out online at www.GMCAIRCOMPRESSORS.com.

Warranty is also available by keeping and showing your original receipt from the date of purchase to an Authorized California Air Tools GMC® Syclone Air Compressor Service Center.

Service

Do not return your air compressor to the place of purchase or any GMC® car/truck dealership.

For all customer service inquiries call California Air Tools GMC® Air Compressor Customer Service at 1-866-409-4581 or visit www.GMCAIRCOMPRESSORS.com.

PRODUCT REGISTRATION

To register your product, please complete the information below and mail to the mailing address at the end of this form, or register online at www.GMCAIRCOMPRESSORS.com.

1. Personal Information:

Full Name (Include Middle Initial): _____

Mailing Address: _____

City: _____ State: _____ Zip Code: _____

Phone Number: _____

E-mail Address: _____

(Check here to receive product information and offers via e-mail)

(Check here to receive product information from other companies via e-mail)

2. Product Information:

Date of Purchase: _____ (MM / DD / YYYY)

Model Number: _____

Serial Number: _____ (Found on nameplate)

Purchased Location: _____

Purchase Price: _____

Type of Primary Use for this Product: Home Recreation Emergency Rental Commercial

Other _____

Features Influencing Product Purchase: Brand Portability Power Rating Price Warranty

Other Features (describe) _____

What other Power Equipment are you interested in purchasing in the future? _____

Thank you for registering your product.

Mail to:
California Air Tools
8560 Siempre Viva Road, Unit 3A
San Diego, CA 92154